Lecture 11/02/11 — FIR DESIGN By Windowing —

Given desired freq. response $H_d(e^{j\omega})$, find impulse response:

$$h_d[n] = \frac{1}{2\pi}\int_{-\pi}^{\pi} H_d(e^{j\omega}) e^{j\omega n}\, d\omega \quad \rightarrow \text{ideal}$$

obtain M^{th} order causal FIR filter by truncating:

$$h[n] = \begin{cases} h_d[n] & 0 \le n \le M \\ \phi & \text{otherwise} \end{cases}$$

Equivalently, $h[n] = h_d[n]\,w[n]$ where $w[n] = \begin{cases} 1 & 0 \le n \le M \\ 0 & \text{otherwise} \end{cases}$

We already saw that:

$$H(e^{j\omega}) = H_d(e^{j\omega}) \circledast W(e^{j\omega})$$

for Boxcar ⇒ $W(e^{j\omega}) = e^{-j\omega\frac{M}{2}} \dfrac{\sin(\omega(M+1)/2)}{\sin(\omega/2)}$

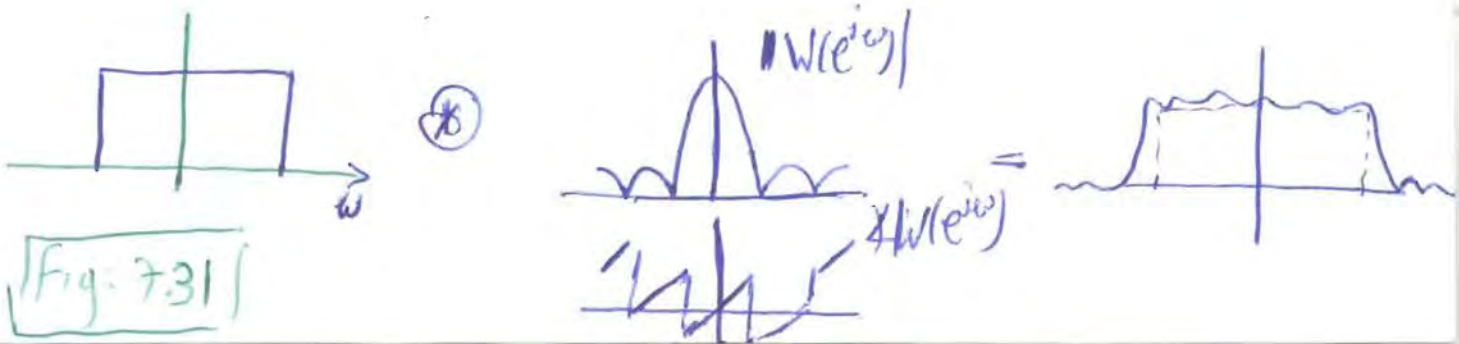

Fig. 7.31

** Boxcar window has sharpest transition, but much ripple.

"Tapered" windows:

Bartlett (triangular):

$$\Delta[n] = \begin{cases} \frac{n}{M-2} & 0 \le n \le M/2 \\ 2 - \frac{n}{M/2} & \frac{M}{2} \le n \le M \end{cases}$$

Hann

$$w[n] = \begin{cases} 0.5 - 0.5\cos(2\pi n/M) & 0 \le n \le M \\ 0 & \text{otherwise} \end{cases}$$

Hamming

$$w[n] = \begin{cases} 0.54 - 0.46\cos(2\pi n/M) & 0 \le n \le M \\ 0 & \text{otherwise} \end{cases}$$

< Figures 7.29 7.30 >

Note tradeoff between main lobe width (transition) and side-lobe amplitude (ripple)

< 7.3.1 >

Matlab command fir1

FIR FILTER DESIGN

Frequency response

(-) Choose a desired frequency response $H_d(e^{j\omega})$

[Non causal and infinite impulse response]

zero delay

(If is derived from CT choose T and use:

$$H_d(e^{j\omega}) = H_c\left(j\frac{\Omega}{T}\right)$$

window

(-) Choose window

(-) Length $M+1$ → sharpness of transition

(-) Type → transition & ripple

(→ modulat desired freq. Response to shift impulse response

$$H_d(e^{j\omega})e^{-j\omega\frac{M}{2}}$$

Determin truncated impulse response $h_1[n]$

$$h_1[n] = \begin{cases} \frac{1}{2\pi} \int_{-\pi}^{\pi} H_d(e^{j\omega}) e^{-j\omega\frac{M}{2}} e^{j n\omega} & 0 \le n \le M \\ 0 & \text{otherwise} \end{cases}$$

Apply window

$$h_\omega[n] = \omega[n] \cdot h_1[n]$$

Check

compute $H_\omega(e^{j\omega})$ if does not meet specs, increase M or use a different window.

Example FIR Low-Pass Filter Design

$$H_d(e^{j\omega}) = \begin{cases} 1 & |\omega| \le \omega_c \\ 0 & \omega_c < |\omega| \le \pi \end{cases}$$

choose $M \rightarrow$ window length. $\Rightarrow H_d(e^{j\omega}) \cdot e^{-j\omega\frac{M}{2}}$

$$h_1[n] = \begin{cases} \dfrac{\sin(\omega_c(n-\frac{M}{2}))}{\pi(n-\frac{M}{2})} = \operatorname{sinc}\left(\dfrac{\omega_c}{\pi}(n-\dfrac{M}{2})\right)\cdot\dfrac{\omega_c}{\pi} & 0 \le n \le M \\ \phi & \text{otherwise} \end{cases}$$

$$\boxed{h_w[n] = h_1[n] \cdot w[n]} \Rightarrow \underline{\text{windowed sinc}}$$

High-Pass: ① design low pass $h_w[n]$

② transform $h_w[n] \cdot (-1)^n = e^{-j\pi n}$

general band pass

transform $h_w[n] \cdot \cos(\omega_0 n)$

characterization of impulse response shape:

TIME - Bandwidth product

$T \cdot (BW)$

$M+1$ $\quad$ $\frac{\omega}{2\pi}$

also total number of zeros of continuous sinc

$TBW = 2$

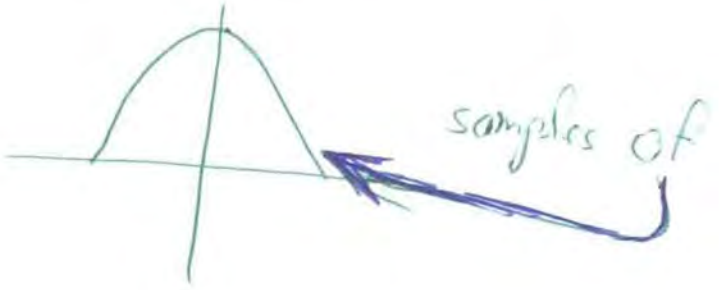

$TBW = 4$

For LP filter with desired ω_s TBW indicates sharpness of transition

Example:

$$\omega_s = \frac{\pi}{2} \Rightarrow BW = \frac{\pi}{2\pi} = \frac{1}{2}$$

$$TBW = 2 \Rightarrow (M+1) \cdot \frac{1}{2} = 2 \Rightarrow M = 3$$

$$TBW = 4 \Rightarrow (M+1) \cdot \frac{1}{2} = 4 \Rightarrow M = 15$$