



EE 232 Lightwave Devices

Lecture 21: Avalanche Photodiode (APD)

Reading: Chuang 15.4 (2nd Ed)

Instructor: Ming C. Wu

University of California, Berkeley
Electrical Engineering and Computer Sciences Dept.

EE232 Lecture 21-1

Prof. Ming Wu



Avalanche Photodiode (APD)

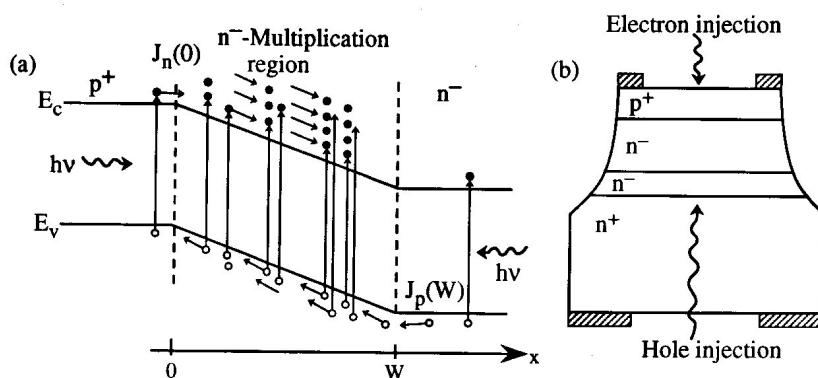


Figure 14.7. (a) The energy band diagram for an avalanche photodiode with the electron and hole ionization coefficients α_n and β_p . The electron and hole injections are given by $J_n(0)$ and $J_p(W)$. (b) A schematic diagram for an avalanche photodiode.

EE232 Lecture 21-2

Prof. Ming Wu



Typical APD Structure: Separate Absorption and Multiplication (SAM) APD

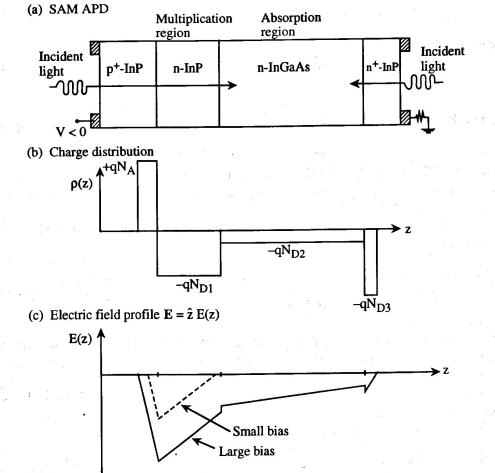


Figure 14.12. (a) A schematic diagram for a separate absorption and multiplication avalanche photodiode (SAM APD), where the absorption occurs at the narrow bandgap InGaAs region and the photogenerated carriers are swept into the InP multiplication region where the electric field is larger. (b) Charge density profile $\rho(z)$ under a large reverse bias. (c) The electric field profile for a profile (solid lines) under a large reverse bias. Dashed lines show the electric field profile for a small bias voltage.

EE232 Lecture 21-3

Prof. Ming Wu



Ideal APD: Injection Impact Ionization Only

$$\frac{dJ_n(x)}{dx} = \alpha_n J_n(x)$$

α_n : electron ionization coefficient [cm^{-1}]

Electron current distribution along the field:

$$J_n(x) = J_n(0)e^{\alpha_n x}$$

Multiplication factor:

$$M_n = \frac{J_n(W)}{J_n(0)} = e^{\alpha_n W}$$

EE232 Lecture 21-4

Prof. Ming Wu



Practical APD:

Both Electron and Hole produce Impact Ionizations

$$\begin{cases} \frac{dJ_n(x)}{dx} = \alpha_n J_n(x) + \beta_p J_p(x) \\ -\frac{dJ_p(x)}{dx} = \alpha_n J_n(x) + \beta_p J_p(x) \end{cases}$$


α_n : electron ionization coefficient [cm^{-1}]

β_p : hole ionization coefficient [cm^{-1}]

$$\frac{d}{dx}(J_n(x) + J_p(x)) = 0$$

$$J_n(x) + J_p(x) = J = \text{constant}$$

$$\frac{dJ_n(x)}{dx} - (\alpha_n - \beta_p) J_n(x) = \beta_p J$$

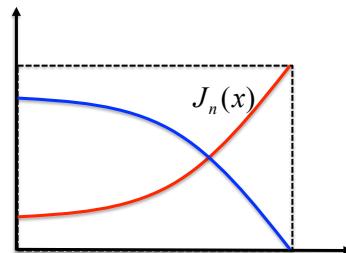

EE232 Lecture 21-5

Prof. Ming Wu



Multiplication Factor

Multiplication factor:


$$M_n = \frac{J}{J_n(0)} = \frac{1}{1 - \int_0^W dx' \alpha_n e^{-(\alpha_n - \beta_p)x'}}$$

$$M_n = \frac{1}{1 - \frac{\alpha_n}{\alpha_n - \beta_p} \left(1 - e^{-(\alpha_n - \beta_p)W} \right)}$$

$$= \frac{\alpha_n - \beta_p}{\alpha_n e^{-(\alpha_n - \beta_p)W} - \beta_p}$$

$$\text{Define } k = \frac{\beta_p}{\alpha_n}$$

$$M_n = \frac{1 - k}{e^{-(1-k)\alpha_n W} - k}$$

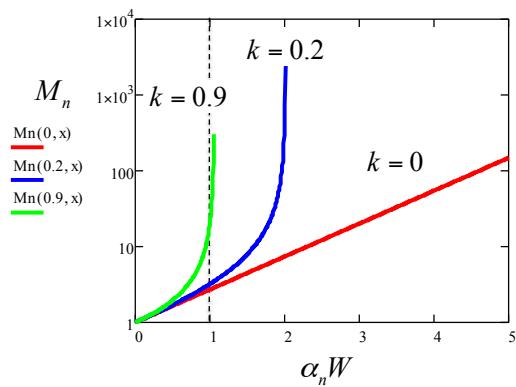

EE232 Lecture 21-6

Prof. Ming Wu



Response Time

Response time =
 transit time in absorption region
 + multiplication time
 $\tau = \tau_t + \tau_m$

$$\left\{ \begin{array}{l} \tau_m = \frac{M_n kW}{v_e} + \frac{W}{v_h} \approx \frac{M_n kW}{v_e} \\ \tau_t = \frac{W_{abs}}{v_h} \end{array} \right.$$

Usually $\tau_m \gg \tau_t \rightarrow \tau \approx \tau_m$

Gain-Bandwidth Product:

$$G \times BW = M_n \cdot \frac{1}{2\pi\tau_m} = M_n \cdot \frac{1}{2\pi} \frac{v_e}{M_n kW}$$

$$G \times BW = \frac{v_e}{2\pi kW} = \text{constant}$$

EE232 Lecture 21-7

Prof. Ming Wu



Noise Figure

Excess noise factor F
 (due to fluctuation in gain):


$$F = \frac{\langle M^2 \rangle}{\langle M \rangle^2} = k \langle M_n \rangle + (1-k) \left(2 - \frac{1}{\langle M_n \rangle} \right)$$

Noise Figure:

$$NF = 10 \log F$$

Small k has small F under high gain $\langle M_n \rangle$

Minimum noise figure = 3 dB occurs when $k = 0$

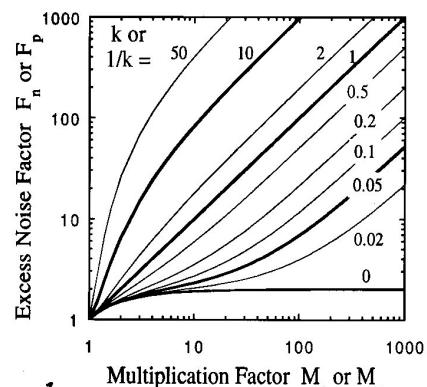

EE232 Lecture 21-8

Prof. Ming Wu



Signal is amplified by the average gain $\langle M \rangle$:

$$i_p^2 = \frac{1}{2} \left(\eta P_{opt} \frac{q}{h\omega} \right)^2 \langle M \rangle^2$$

Shot noise is amplified by $\langle M^2 \rangle$:

$$\begin{aligned} \langle i_s^2 \rangle &= 2e(I_p + I_B + I_D) \langle M^2 \rangle dv \\ &= 2e(I_p + I_B + I_D) F \langle M \rangle^2 dv \end{aligned}$$

I_p : photocurrent;

I_B : background photocurrent


I_D : dark current

$$\langle i_T^2 \rangle = \frac{4k_B T \Delta v}{R}$$

$$SNR = \frac{\frac{1}{2} \left(\eta P_{opt} \frac{q}{h\omega} \right)^2 \langle M \rangle^2}{2e(I_p + I_B + I_D) F \langle M \rangle^2 dv + \frac{4k_B T \Delta v}{R}}$$

EE232 Lecture 21-9

APD Noises

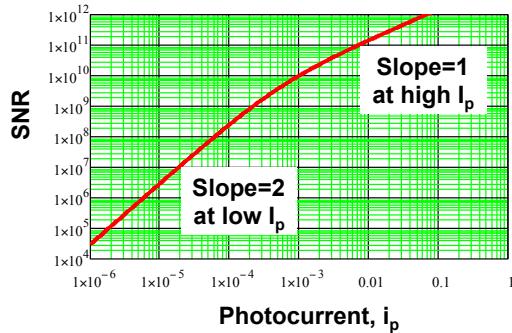

Prof. Ming Wu




SNR Comparison of p-i-n and APD

$$APD: SNR = \frac{\frac{1}{2} \left(\eta P_{opt} \frac{q}{h\omega} \right)^2 \langle M \rangle^2}{2e(I_p + I_B + I_D) F \langle M \rangle^2 dv + \frac{4k_B T \Delta v}{R}}$$

p-i-n: set $\langle M \rangle = 1$, $F = 1$

$$SNR = \frac{\frac{1}{2} \left(\eta P_{opt} \frac{q}{h\omega} \right)^2}{2e(I_p + I_B + I_D) dv + \frac{4k_B T \Delta v}{R}}$$

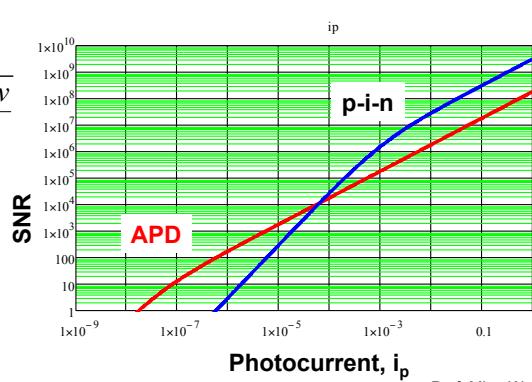

EE232 Lecture 21-10

Prof. Ming Wu