


Lecture 6 – Introduction to MIPS
Data Transfer & Decisions I

2014-09-12

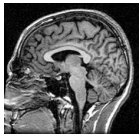

Instructor:
Miki Lustig

MIPS Strikes Back: Imagination Technologies (acquired MIPS Technologies in 2012) with the aim to take on ARM announced Warrior I6400 core, based on MIPS64. Applications: Mobile, home entertainment, automotive, networking...



<http://www.anandtech.com/show/8457/mips-strikes-back-64bit-warrior-i6400-architecture-arrives>

Review

- In MIPS Assembly Language:
 - Registers replace variables
 - One Instruction (simple operation) per line
 - Simpler is Better, Smaller is Faster
- New Instructions:
add, addi, sub
- New Registers:
C Variables: \$s0 - \$s7
Temporary Variables: \$t0 - \$t7
Zero: \$zero



Assembly Operands: Memory


- C variables map onto registers; what about large data structures like arrays?
- 1 of 5 components of a computer: **memory** contains such data structures
- But MIPS arithmetic instructions only operate on registers, never directly on memory.
- Data transfer instructions** transfer data between registers and memory:
 - Memory to register
 - Register to memory



Anatomy: 5 components of any Computer



Registers are in the datapath of the processor; if operands are in memory, we must transfer them to the processor to operate on them, and then transfer back to memory when done.

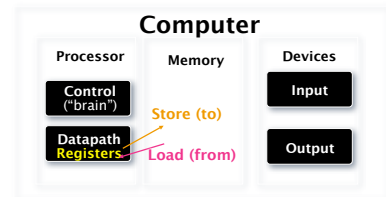

These are “data transfer” instructions...



Data Transfer: Memory to Reg (1/4)

- To transfer a word of data, we need to specify two things:
 - Register**: specify this by number (\$0 - \$31) or symbolic name (\$s0, ..., \$t0, ...)
 - Memory address**: more difficult
 - Think of memory as a single one-dimensional array, so we can address it simply by supplying a pointer to a memory address.
 - Other times, we want to be able to **offset** from this pointer.
- Remember: “**Load FROM memory**”



Data Transfer: Memory to Reg (2/4)

- To specify a memory address to copy from, specify two things:
 - A register containing a pointer to memory
 - A numerical offset (in bytes)
- The desired memory address is the sum of these two values.
- Example**: 8(\$t0)
 - specifies the memory address pointed to by the value in \$t0, plus 8 bytes



Data Transfer: Memory to Reg (3/4)

•Load Instruction Syntax:

1 2,3(4)

•where

- 1) operation name
- 2) register that will receive value
- 3) numerical offset **in bytes**
- 4) register containing pointer to memory

•MIPS Instruction Name:

- lw** (meaning Load Word, so 32 bits or one word are loaded at a time)



Data Transfer: Memory to Reg (4/4)



Example: **lw \$t0, 12(\$s0)**

This instruction will take the pointer in \$s0, add 12 bytes to it, and then load the value from the memory pointed to by this calculated sum into register \$t0

•Notes:

- **\$s0** is called the **base register**
- **12** is called the **offset**
- offset is generally used in accessing elements of array or structure: base reg points to beginning of array or structure (note offset must be a **constant known at assembly time**)



Data Transfer: Reg to Memory

•Also want to store from register into memory

- Store instruction syntax is identical to Load's

•MIPS Instruction Name:

sw (meaning Store Word, so 32 bits or one word is stored at a time)



•Example: **sw \$t0, 12(\$s0)**

This instruction will take the pointer in \$s0, add 12 bytes to it, and then store the value from register \$t0 into that memory address

•Remember: “Store INTO memory”



Pointers v. Values

•Key Concept: A register can hold any 32-bit value. That value can be a (signed) int, an unsigned int, a pointer (memory addr), and so on

- E.g., If you write: **add \$t2, \$t1, \$t0** then \$t0 and \$t1 better contain values that can be added
- E.g., If you write: **lw \$t2, 0(\$t0)** then \$t0 better contain a pointer

•Don't mix these up!



Addressing: Byte vs. Word

•Every word in memory has an **address**, similar to an index in an array

•Early computers numbered words like C numbers elements of an array:

•Memory[0], Memory[1], Memory[2], ...

Called the “**address**” of a word

•Computers needed to access 8-bit **bytes** as well as words (4 bytes/word)

•Today machines address memory as bytes, (i.e., “**Byte Addressed**”) hence 32-bit (4 byte) word addresses differ by 4

•Memory[0], Memory[4], Memory[8]



Compilation with Memory

•What offset in **lw** to select **A[5]** in C?

• $4 \times 5 = 20$ to select **A[5]**: byte v. word

•Compile by hand using registers:

g = h + A[5];

- **g: \$s1, h: \$s2, \$s3: base address of A**

•1st transfer from memory to register:

lw \$t0, 20(\$s3) # \$t0 gets A[5]

- Add **20** to \$s3 to select **A[5]**, put into \$t0

•Next add it to h and place in g

add \$s1, \$s2, \$t0 # \$s1 = h+A[5]




Notes about Memory

- Pitfall: Forgetting that sequential word addresses in machines with byte addressing do not differ by 1.
 - Many an assembly language programmer has toiled over errors made by assuming that the address of the next word can be found by incrementing the address in a register by 1 instead of by the word size in bytes.
 - Also, remember that for both `lw` and `sw`, the sum of the base address and the offset must be a multiple of 4 (to be word aligned)



More Notes about Memory: Alignment

- MIPS requires that all words start at byte addresses that are multiples of 4 bytes

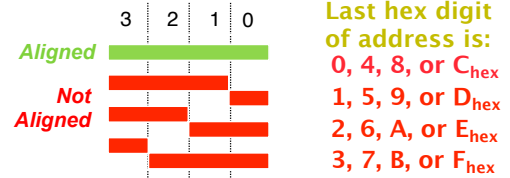

- Called **Alignment**: objects fall on address that is multiple of their size



Role of Registers vs. Memory

- What if more variables than registers?
 - Compiler tries to keep most frequently used variable in registers
 - Less common variables in memory: **spilling**
- Why not keep all variables in memory?
 - Smaller is faster: registers are faster than memory
 - Registers more versatile:
 - MIPS arithmetic instructions can read 2, operate on them, and write 1 per instruction
 - MIPS data transfer only read or write 1 operand per instruction, and no operation



So Far...

- All instructions so far only manipulate data... we've built a **calculator** of sorts.
- In order to build a **computer**, we need ability to make decisions...
- C (and MIPS) provide **labels** to support "goto" jumps to places in code.
 - C: Horrible style; MIPS: Necessary!
- Heads up: pull out some papers and pens, you'll do an in-class exercise!



C Decisions: if Statements

- 2 kinds of if statements in C

```
if (condition) clause1
else clause2
```
- Rearrange 2nd if into following:

```
if (condition) goto L1;
clause2;
goto L2;
L1: clause1;
L2:
```
- Not as elegant as if-else, but same meaning



MIPS Decision Instructions

- Decision instruction in MIPS:

```
beq register1, register2, L1
```

beq is "Branch if (registers are) equal"
Same meaning as (using C):
if (register1==register2) goto L1
- Complementary MIPS decision instruction

```
bne register1, register2, L1
```

bne is "Branch if (registers are) not equal"
Same meaning as (using C):
if (register1!=register2) goto L1
- Called **conditional branches**



MIPS Goto Instruction

- In addition to conditional branches, MIPS has an **unconditional branch**:


j label

- Called a Jump Instruction: jump (or branch) directly to the given label without needing to satisfy any condition
- Same meaning as (using C): **goto label**
- Technically, it's the same effect as:
`beq $0, $0, label`
 since it always satisfies the condition



Compiling C if into MIPS (1/2)

- Compile by hand
`if (i == j) f=g+h;
 else f=g-h;`

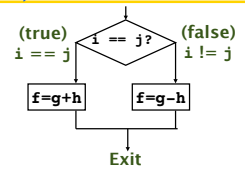


- Use this mapping:

f: \$s0
 g: \$s1
 h: \$s2
 i: \$s3
 j: \$s4



Compiling C if into MIPS (2/2)

- Compile by hand
`if (i == j) f=g+h;
 else f=g-h;`

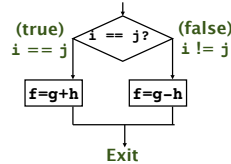

- Final compiled MIPS code:

```

    beq $s3,$s4,True # branch i==j
    sub $s0,$s1,$s2 # f=g-h(false)
    j   Fin         # goto Fin
True: add $s0,$s1,$s2 # f=g+h (true)
Fin:
  
```

- Note: Compiler automatically creates labels to handle decisions (branches). Generally not found in HLL code.



Peer Instruction

We want to translate `*x = *y` into MIPS
 (x, y ptrs stored in: \$s0 \$s1)

- | | |
|----|--------|
| a) | 1 or 2 |
| b) | 3 or 4 |
| c) | 5→6 |
| d) | 6→5 |
| e) | 7→8 |

```

1: add $s0, $s1, zero
2: add $s1, $s0, zero
3: lw  $s0, 0($s1)
4: lw  $s1, 0($s0)
5: lw  $t0, 0($s1)
6: sw  $t0, 0($s0)
7: lw  $s0, 0($t0)
8: sw  $s1, 0($t0)
  
```



“And in Conclusion...”

- Memory is **byte**-addressable, but `lw` and `sw` access one **word** at a time.
- A pointer (used by `lw` and `sw`) is just a memory address, we can add to it or subtract from it (using `offset`).
- A Decision allows us to decide what to execute at run-time rather than compile-time.
- C Decisions are made using **conditional statements** within `if`, `while`, `do while`, `for`.
- MIPS Decision making instructions are the **conditional branches**: `beq` and `bne`.
- New Instructions:
`lw`, `sw`, `beq`, `bne`, `j`

