


inst.eecs.berkeley.edu/~cs61c
CS61C : Machine Structures

**Lecture 9 – MIPS
Instruction Representation II**

2014-09-19

**Instructor:
Miki Lustig**

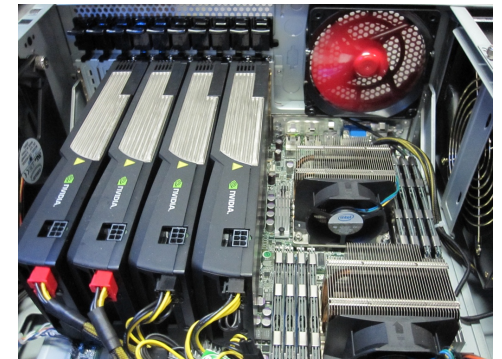

September 8: NIH press release

Advanced Technologies Vastly Improve MRI for Children, Scans are faster; less anesthesia needed.

Collaboration Stanford, UCB and GE healthcare. Implement a technique called **compressed sensing**. Compressed sensing reduces scan times by gathering only a small fraction of the data conventionally needed to enable reconstruction of a complete magnetic resonance image.

<http://www.nibib.nih.gov/news-events/newsroom/advanced-technologies-vastly-improve-mri-children>



Review of Last Lecture

- **Simplifying MIPS:** Define instructions to be same size as data word (one word) so that they can use the same memory
 - Computer actually stores programs as a series of these 32-bit numbers
- **MIPS Machine Language Instruction:**
32 bits representing a single instruction

R:

opcode	rs	rt	rd	shamt	funct
--------	----	----	----	-------	-------

I:

opcode	rs	rt	immediate
--------	----	----	-----------



Great Idea #1: Abstraction

High Level Language Program (e.g., C)

Compiler

Assembly Language Program (e.g., MIPS)

Assembler

Machine Language Program (MIPS)

Machine Interpretation

Hardware Architecture Description (e.g., block diagrams)

Architecture Implementation


Logic Circuit Description (Circuit Schematic Diagrams)

```
temp = v[k];
v[k] = v[k+1];
v[k+1] = temp;
```

```
lw $t0, 0($2)
lw $t1, 4($2)
sw $t1, 0($2)
sw $t0, 4($2)
```

Anything can be represented as a number, i.e., data or instructions

```
1000 1101 1110 0010 0000 0000 0000 0000
1000 1110 0001 0000 0000 0000 0000 0100
1010 1110 0001 0010 0000 0000 0000 0000
1010 1101 1110 0010 0000 0000 0000 0100
```

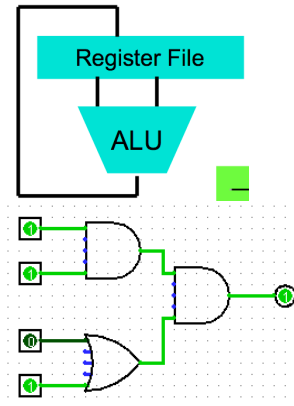

Agenda

- I-Format
 - Branching and PC-Relative Addressing
- Administrivia
- J-Format
- Pseudo-instructions
- Bonus: Assembly Practice
- Bonus: Disassembly Practice



I-Format immediates

- `immediate` (16): *two's complement* number
 - All computations done in words, so 16-bit immediate must be *extended* to 32 bits
 - Green Sheet specifies `ZeroExtImm` or `SignExtImm` based on instruction
- Can represent 2^{16} different immediates
 - This is large enough to handle the offset in a typical `lw/sw`, plus the vast majority of values for `slti`



Dealing With Large Immediates

- How do we deal with 32-bit immediates?
 - Sometimes want to use immediates $> \pm 2^{15}$ with `addi`, `lw`, `sw` and `slti`
 - Bitwise logic operations with 32-bit immediates
- **Solution:** Don't mess with instruction formats, just add a new instruction
- **Load Upper Immediate** (`lui`)
 - `lui reg, imm`
 - Moves 16-bit `imm` into upper half (bits 16-31) of `reg` and zeros the lower half (bits 0-15)



lui Example

- **Want:** `addiu $t0, $t0, 0xABABCDCD`
 - This is a pseudo-instruction!
- **Translates into:**

```
lui   $at, 0xABAB           # upper 16
ori   $at, $at, 0xCDCD      # lower 16
addu  $t0, $t0, $at         # move
```


← Only the assembler gets to use \$at

- Now we can handle everything with a 16-bit immediate!



Branching Instructions

- `beq` and `bne`
 - Need to specify an address to go to
 - Also take two registers to compare
- Use I-Format:

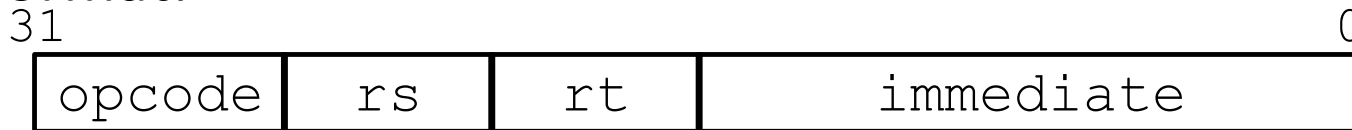

- opcode specifies `beq` (4) vs. `bne` (5)
- `rs` and `rt` specify registers
- How to best use `immediate` to specify addresses?



Branching Instruction Usage

- Branches typically used for loops (`if-else`, `while`, `for`)
 - Loops are generally small (< 50 instructions)
 - Function calls and unconditional jumps handled with jump instructions (J-Format)
- **Recall:** Instructions stored in a localized area of memory (Code/Text)
 - Largest branch distance limited by size of code
 - Address of current instruction stored in the program counter (PC)



PC-Relative Addressing

- **PC-Relative Addressing:** Use the `immediate` field as a two's complement offset to PC
 - Branches generally change the PC by a small amount
 - Can specify $\pm 2^{15}$ addresses from the PC
- So just how much of memory can we reach?



Branching Reach

- **Recall:** MIPS uses 32-bit addresses
 - Memory is byte-addressed
- Instructions are *word-aligned*
 - Address is always multiple of 4 (in bytes), meaning it ends with `0b00` in binary
 - Number of bytes to add to the PC will always be a multiple of 4
- Immediate specifies words instead of bytes
 - Can now branch $\pm 2^{15}$ words
 - We can reach 2^{16} instructions = 2^{18} bytes around PC



Branch Calculation

- If we **don't** take the branch:
 - $PC = PC + 4 =$ next instruction
- If we **do** take the branch:
 - $PC = (PC+4) + (\text{immediate} * 4)$
- **Observations:**
 - `immediate` is number of instructions to jump (remember, specifies words) either forward (+) or backwards (–)
 - Branch from $PC+4$ for hardware reasons; will be clear why later in the course




Branch Example (1/2)

- MIPS Code:

```
Loop: beq    $9, $0, End  
      addu   $8, $8, $10  
      addiu  $9, $9, -1  
      j      Loop  
End:
```

Start counting from
instruction AFTER the
branch



- I-Format fields:

opcode = 4 (look up on Green Sheet)
rs = 9 (first operand)
rt = 0 (second operand)
immediate = ??? 3



Branch Example (2/2)


- MIPS Code:

```
Loop: beq    $9, $0, End
      addu   $8, $8, $10
      addiu  $9, $9, -1
      j     Loop
End:
```

Field representation (decimal):



Field representation (binary):

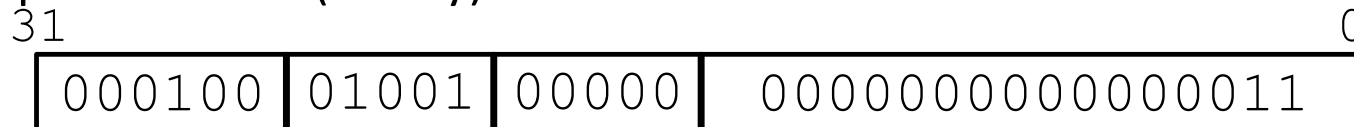

Questions on PC-addressing

- Does the value in branch immediate field change if we move the code?
 - If moving individual lines of code, then yes
 - If moving all of code, then no
- What do we do if destination is $> 2^{15}$ instructions away from branch?
 - Other instructions save us

```
–beq $s0,$0,far          bne $s0,$0,next
  # next instr           j     far
                        next: # next instr
```



Administrivia

- Project update
- Midterm part 1, 10/10




J-Format Instructions (1/4)

- For branches, we assumed that we won't want to branch too far, so we can specify a *change* in the PC
- For general jumps (`j` and `jal`), we may jump to *anywhere* in memory
 - Ideally, we would specify a 32-bit memory address to jump to
 - Unfortunately, we can't fit both a 6-bit `opcode` and a 32-bit address into a single 32-bit word




J-Format Instructions (2/4)

- Define two “fields” of these bit widths:

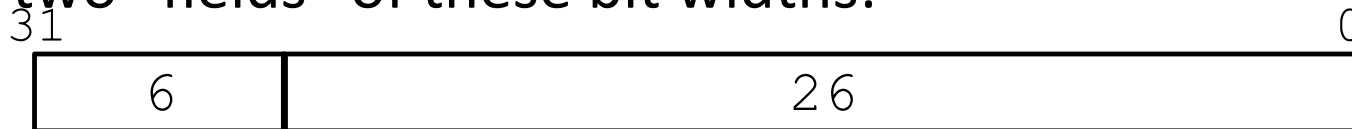

- As usual, each field has a name:

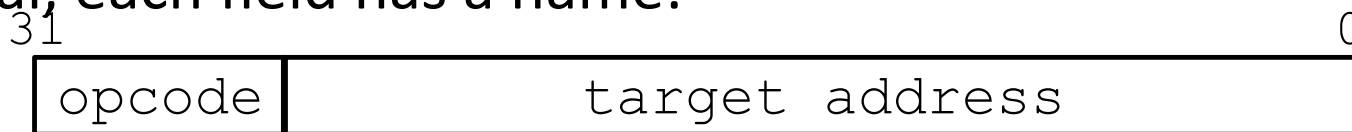

- **Key Concepts:**

- Keep `opcode` field identical to R-Format and I-Format for consistency
- Collapse all other fields to make room for large target address



J-Format Instructions (3/4)

- We can specify 2^{26} addresses
 - Still going to word-aligned instructions, so add `0b00` as last two bits (multiply by 4)
 - This brings us to 28 bits of a 32-bit address
- Take the 4 highest order bits from the PC
 - Cannot reach *everywhere*, but adequate almost all of the time, since programs aren't that long
 - Only problematic if code straddles a 256MB boundary
- If necessary, use 2 jumps or `j r` (R-Format) instead



J-Format Instructions (4/4)

- Jump instruction:
 - New PC = { (PC+4)[31..28], target address, 00 }
- Notes:
 - { , , } means concatenation
 - { 4 bits , 26 bits , 2 bits } = 32 bit address
 - Book uses || instead
 - Array indexing: [31..28] means highest 4 bits
 - For hardware reasons, use PC+4 instead of PC



Question: When combining two C files into one executable, we can compile them independently and then merge them together.

When merging two or more binaries:

- 1) **Jump** instructions don't require any changes
- 2) **Branch** instructions don't require any changes

	1	2
a)	F	F
b)	F	T
c)	T	F
d)	T	T



Question: When combining two C files into one executable, we can compile them independently and then merge them together.

When merging two or more binaries:

- 1) **Jump** instructions don't require any changes
- 2) **Branch** instructions don't require any changes

	1	2
a)	F	F
b)	F	T
c)	T	F
d)	T	T



Assembler Pseudo-Instructions

- Certain C statements are implemented unintuitively in MIPS
 - e.g. assignment (`a=b`) via addition with 0
- MIPS has a set of “pseudo-instructions” to make programming easier
 - More intuitive to read, but get translated into actual instructions later
- Example:

`move dst, src` translated into
`addi dst, src, 0`



Assembler Pseudo-Instructions

- List of pseudo-instructions: http://en.wikipedia.org/wiki/MIPS_architecture#Pseudo_instructions
 - List also includes instruction translation
- **Load Address** (`la`)
 - `la dst, label`
 - Loads address of specified label into `dst`
- **Load Immediate** (`li`)
 - `li dst, imm`
 - Loads 32-bit immediate into `dst`
- MARS has additional pseudo-instructions
 - See Help (F1) for full list



Assembler Register

- Problem:
 - When breaking up a pseudo-instruction, the assembler may need to use an extra register
 - If it uses a regular register, it'll overwrite whatever the program has put into it
- Solution:
 - Reserve a register (**\$1** or **\$at** for “assembler temporary”) that assembler will use to break up pseudo-instructions
 - Since the assembler may use this at any time, it's not safe to code with it




MAL vs. TAL

- True Assembly Language (TAL)
 - The instructions a computer understands and executes
- MIPS Assembly Language (MAL)
 - Instructions the assembly programmer can use (includes pseudo-instructions)
 - Each MAL instruction becomes 1 or more TAL instructions
- $TAL \subset MAL$




Summary

- **I-Format:** instructions with immediates, `lw/sw` (offset is immediate), and `beq/bne`
 - But not the shift instructions
 - Branches use PC-relative addressing



- **J-Format:** `j` and `jal` (but not `jr`)
 - Jumps use absolute addressing



- **R-Format:** all other instructions

