

UC Berkeley

# EE C245 - ME C218 Introduction to MEMS Design Fall 2010

Prof. Clark T.-C. Nguyen

Dept. of Electrical Engineering & Computer Sciences  
University of California at Berkeley  
Berkeley, CA 94720

Lecture Module 5: Surface Micromachining

EE C245: Introduction to MEMS Design LecM 5 C. Nguyen 8/20/09 1

UC Berkeley

## Lecture Outline

- Reading: Senturia Chpt. 3, Jaeger Chpt. 11, Handout: "Surface Micromachining for Microelectromechanical Systems"
- Lecture Topics:
  - ↗ Polysilicon surface micromachining
  - ↗ Stiction
  - ↗ Residual stress
  - ↗ Topography issues
  - ↗ Nickel metal surface micromachining
  - ↗ 3D "pop-up" MEMS
  - ↗ Foundry MEMS: the "MUMPS" process
  - ↗ The Sandia SUMMIT process

EE C245: Introduction to MEMS Design LecM 5 C. Nguyen 8/20/09 2

UC Berkeley

## "Foundry" MEMS: The MUMPS Process


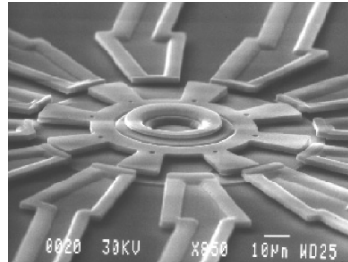
EE C245: Introduction to MEMS Design LecM 5 C. Nguyen 8/20/09 3

UC Berkeley

## MUMPS: MultiUser MEMS Process

- Originally created by the Microelectronics Center of North Carolina (MCNC) → now owned by MEMSCAP in France
- Three-level polysilicon surface micromachining process for prototyping and "foundry" services
- Designed to service as many users as possible; basically an attempt to provide a universal MEMS process
- 8 photomasks
- \$4,900 for 1 cm<sup>2</sup> dies

Micromotor fabricated via MUMPS



EE C245: Introduction to MEMS Design LecM 5 C. Nguyen 8/20/09 4

### MUMPS: MultiUser MEMS Process

UC Berkeley

Material Layer	Thickness (μm)	Lithography Level Name
Nitride	0.6	--
Poly 0	0.5	POLY0 (HOLE0)
First Oxide	2.0	DIMPLE ANCHOR1
Poly 1	2.0	POLY1 (HOLE1)
Second Oxide	0.75	POLY1_POLY2_VIA ANCHOR2
Poly 2	1.5	POLY2 (HOLE2)
Metal	0.5	METAL (HOLEM)

EE C245: Introduction to MEMS Design LecM 5 C. Nguyen 8/20/09 5

### Masks in polyMUMPS

UC Berkeley

Minimum set of masks that must be used in MUMPS

Mnemonic level name	Field type	Purpose
POLY0	light	pattern ground plane
ANCHOR1	dark	open holes for Poly 1 to Nitride or Poly 0 connection
DIMPLE	dark	create dimples/bushings for Poly 1
POLY1	light	pattern Poly 1
POLY1_POLY2_VIA	dark	open holes for Poly 1 to Poly 2 connection
ANCHOR2	dark	open holes for Poly 2 to Nitride or Poly 0 connection
POLY2	light	pattern Poly 2
METAL	light	pattern Metal
HOLE0	dark	provide holes for POLY0
HOLE1	dark	provide release holes for POLY1
HOLE2	dark	provide release holes for POLY2
HOLEM	dark	provide release holes in METAL

Extra masks for more flexibility & ease of release

- Field type:
  - Light (or clear) field (cf): in layout, boxes represent features that will stay through fabrication
  - Dark field (df): in layout, boxes represent holes to be cut out

EE C245: Introduction to MEMS Design LecM 5 C. Nguyen 8/20/09 6

### MUMPS Process Flow

UC Berkeley

- Deposit PSG on the starting n-type (100) wafers
- Anneal to heavily dope the wafers
- Remove the PSG
- LPCVD 600 nm of low stress nitride
- LPCVD 500 nm of polysilicon
- Lithography using the POLY0(cf) mask and RIE etching to pattern the poly0 ground plane layer
- LPCVD 2 μm of PSG as the 1st sacrificial layer
- Lithography using the DIMPLE(df) mask (align to poly0)
- RIE 750 nm deep to form dimple vias
- Lithography using the ANCHOR1(df) mask (align to poly0)
- RIE anchor vias down to the nitride surface

EE C245: Introduction to MEMS Design LecM 5 C. Nguyen 8/20/09 7

### MUMPS Process Flow (cont.)

UC Berkeley

- LPCVD 2 μm undoped polysilicon
- LPCVD 200 nm of PSG
- Anneal for 1 hr. @ 1050°C
  - This both dopes the polysilicon and reduces its residual stress
- Lithography using the POLY1(cf) mask to define structures (align to anchor1)
- RIE the PSG to create a hard mask first, then ...
- RIE the polysilicon
- LPCVD 750 nm of PSG
- Lithography using the P1\_P2\_VIA(df) mask to define contacts to the poly1 layer (align to poly1)

EE C245: Introduction to MEMS Design LecM 5 C. Nguyen 8/20/09 8

### MUMPS Process Flow (cont.)

- Recoat with photoresist and do lithography using the ANCHOR2(df) mask to define openings where poly2 contacts nitride or poly0 (align to poly0)
- RIE the PSG at ANCHOR2 openings
- LPCVD 1.5  $\mu\text{m}$  undoped polysilicon
- LPCVD 200 nm PSG as a hard mask and doping source
- Anneal for 1 hr @ 1050°C to dope the polysilicon and reduce residual stress
- Lithography using the POLY2(cf) mask (align to anchor2)
- RIE PSG hard mask
- RIE poly2 film
- Remove PR and hard mask

EE C245: Introduction to MEMS Design LecM 5 C. Nguyen 8/20/09 9

### MUMPS Process Flow (cont.)

- Lithography using the METAL (df) mask (align to poly2)
- Evaporate titanium (Ti) (as an adhesion layer for gold)
- Evaporate gold (Au)
- Liftoff to remove PR and define metal interconnects
- Coat wafers with protective PR
- Dice wafers
- Ship to customer
- Customer releases structures by dipping and agitating dies in a 48.8 wt. % HF solution or via vapor phase HF
- Anti-stiction dry, if needed

Final Structure: Micromotor

EE C245: Introduction to MEMS Design LecM 5 C. Nguyen 8/20/09 10

### MUMPS: MultiUser MEMS Process

- Originally created by the Microelectronics Center of North Carolina (MCNC)  $\rightarrow$  now owned by MEMSCAP in France
- Three-level polysilicon surface micromachining process for prototyping and "foundry" services
- Designed to service as many users as possible; basically an attempt to provide a universal MEMS process
- 8 photomasks
- \$4,900 for 1  $\text{cm}^2$  dies

Micromotor fabricated via MUMPS

EE C245: Introduction to MEMS Design LecM 5 C. Nguyen 8/20/09 11

### polyMUMPS Minimum Feature Constraints

- Minimum feature size
  - Determined by MUMPS' photolithographic resolution and alignment precision
  - Violations result in missing (unanchored), under/oversized, or fused features
  - Use minimum feature only when absolutely necessary

	Nominal [ $\mu\text{m}$ ]	Min Feature [ $\mu\text{m}$ ]	Min Spacing [ $\mu\text{m}$ ]
POLY0, POLY1, POLY2	3	2	2
POLY1_POLY2_VIA	3	2	2
ANCHOR1, ANCHOR2	3	3	2
DIMPLE	3	2	3
METAL	3	3	3
HOLE1, HOLE2	4	3	3
HOLEM	5	4	4

EE C245: Introduction to MEMS Design LecM 5 C. Nguyen 8/20/09 12

### MUMPS Design Rules (cont.)

Rule	Rule Letter	Figure #	Min. Value ( $\mu\text{m}$ )
POLY0 space to ANCHOR1	A	2.5	4.0
POLY0 enclose ANCHOR1	B	2.5	4.0
POLY0 enclose POLY1	C	2.6	4.0
POLY0 enclose POLY2	D	2.7	5.0
POLY0 enclose ANCHOR2	E	2.8	5.0
POLY0 space to ANCHOR2	F	2.8	5.0

**Cross Sections**

- Poly0
- Oxide1
- Oxide2
- Poly1
- Poly2
- Metal

**Mask Levels**

- Poly0
- Anchor1
- Poly1
- Poly1-Poly2 Via
- Poly2
- Anchor2
- Metal
- Dimple

EE C245: Introduction to MEMS Design LecM 5 C. Nguyen 8/20/09 13

### MUMPS Design Rules (cont.)

Rule	Min. Value ( $\mu\text{m}$ )
POLY1 enclose ANCHOR1	4.0
POLY1 enclose DIMPLE	4.0
POLY1 enclose POLY1_POLY2_VIA	4.0
POLY1 enclose POLY2	4.0
POLY1 space to ANCHOR2	3.0
*Lateral etch holes space in POLY1	$\leq 30$ (max. value)

**Cross Sections**

- Poly0
- Oxide1
- Oxide2
- Poly1
- Poly2
- Metal

**Mask Levels**

- Poly0
- Anchor1
- Poly1
- Poly1-Poly2 Via
- Poly2
- Anchor2
- Metal
- Dimple

EE C245: Introduction to MEMS Design LecM 5 C. Nguyen 8/20/09 14

### MUMPS Design Rules (cont.)

Rule	Rule Letter	Figure #	Min. Value ( $\mu\text{m}$ )
POLY0 space to ANCHOR1	A	2.5	4.0
POLY0 enclose ANCHOR1	B	2.5	4.0
POLY0 enclose POLY1	C	2.6	4.0
POLY0 enclose POLY2	D	2.7	5.0
POLY0 enclose ANCHOR2	E	2.8	5.0
POLY0 space to ANCHOR2	F	2.8	5.0

Rule	Rule Letter	Figure #	Min. Value ( $\mu\text{m}$ )
POLY1 enclose ANCHOR1	G	2.6	4.0
POLY1 enclose DIMPLE	N	2.13	4.0
POLY1 enclose POLY1_POLY2_VIA	H	2.9, 2.11	4.0
POLY1 enclose POLY2	O	2.14	4.0
POLY1 space to ANCHOR2	K	2.11	3.0
*Lateral etch holes space in POLY1	R	2.15	$\leq 30$ (max. value)

Rule	Rule Letter	Figure #	Min. Value ( $\mu\text{m}$ )
POLY2 enclose ANCHOR2	J	2.7, 2.10	5.0
POLY2 enclose POLY1_POLY2_VIA	L	2.9	4.0
POLY2 cut-in POLY1	P	2.14	5.0
POLY2 cut-out POLY1	Q	2.14	4.0
POLY2 enclose METAL	M	2.12	3.0
POLY2 space to POLY1	I	2.10	3.0
HOLE2 enclose HOLE1	T	2.16	2.0
HOLEM enclose HOLE2	U	2.16	2.0
*Lateral etch holes space in POLY2	S	2.15	$\leq 30$ (max. value)

EE C245: Introduction to MEMS Design LecM 5 C. Nguyen 8/20/09 15

### MUMPS Design Rules (cont.)

Level 1	Level 2	Min. Feature	Min. Spacing	Enclose	Spacing	Cut-In	Cut-Out
POLY0	-	2	2				
	ANCHOR1			4/B/2.5	4/A/2.5		
	POLY1			4/C/2.6			
	ANCHOR2			5/E/2.8	5/F/2.8		
POLY1	-	2	2 / 2.5 <sup>2</sup>				
	POLY0						
	ANCHOR1			4/G/2.6			
	ANCHOR2				3/K/2.11		
	POLY2			4/O/2.14			
POLY2	-	2	2 / 2.5 <sup>2</sup>				
	POLY0						
	POLY1						
	VIA			4/L/2.9	3/I/2.10	5/P/2.14	4/Q/2.14
	ANCHOR2			5/J/2.7			
	METAL			3/M/2.12			
HOLEM	HOLE2			2/U/2.16			
HOLE2	HOLE1			2/T/2.16			

**TABLE 2.7.** PolyMUMPs design rule reference sheet. Table shows minimum dimensions ( $\mu\text{m}$ ), rule name, and figure number, respectively.

EE C245: Introduction to MEMS Design LecM 5 C. Nguyen 8/20/09 16

UC Berkeley


## The Sandia SUMMIT Process

EE C245: Introduction to MEMS Design    LecM 5    C. Nguyen    8/20/09    17

UC Berkeley

## Sandia's SUMMIT V


- **SUMMIT V: "Sandia Ultra-planar Multi-level MEMS Technology 5" fabrication process**
  - ↳ Five-layer polysilicon surface micromachining process
  - ↳ One electrical interconnect layer & 4 mechanical layers
  - ↳ Uses chemical mechanical polishing (CMP) to maintain planarity as more structural layers are realized
  - ↳ 14 masks

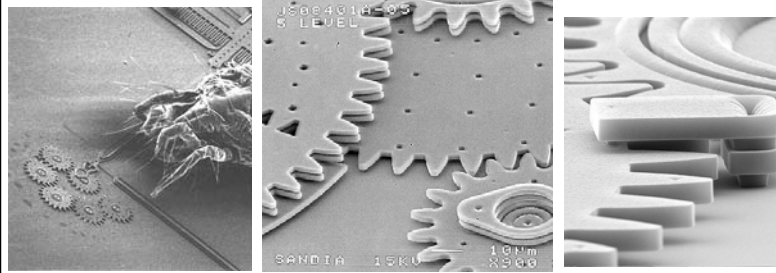

EE C245: Introduction to MEMS Design    LecM 5    C. Nguyen    8/20/09    18

UC Berkeley

## SUMMIT V Layer Stack

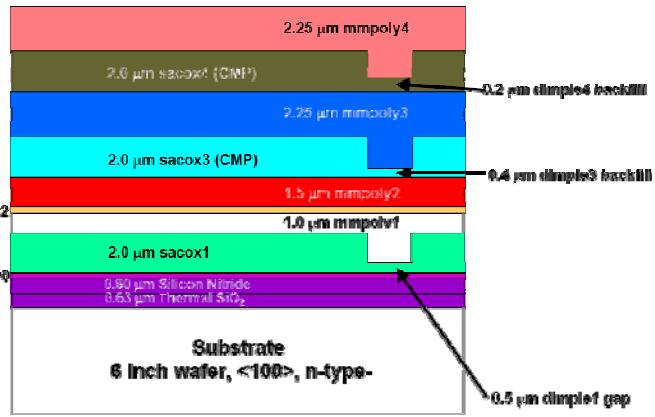

Substrate  
6 inch wafer, <100>, n-type-


- Uses chemical mechanical polishing (CMP) to maintain planarity as more structural layers are realized

EE C245: Introduction to MEMS Design    LecM 5    C. Nguyen    8/20/09    19

UC Berkeley

## Chemical Mechanical Polishing (CMP)

- Used to planarize the top surface of a semiconductor wafer or other substrate
- Uses an abrasive and corrosive chemical slurry (i.e., a colloid) in conjunction with a polishing pad
  - ↳ Wafer and pad are pressed together
  - ↳ Polishing head is rotated with different axes of rotation (i.e., non-concentric) to randomize the polishing

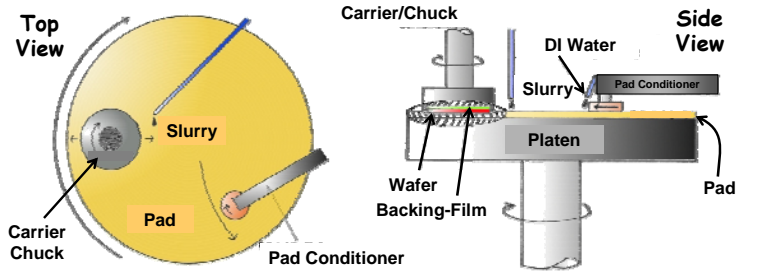

EE C245: Introduction to MEMS Design    LecM 5    C. Nguyen    8/20/09    20



**CMP: Not the Same as Lapping**

**Lapping**

- Lapping is merely the removal of material to flatten a surface without selectivity
- Everything is removed at approximately the same rate

**Chemical Mechanical Polishing**

- CMP is selective to certain films, and not selective to others

EE C245: Introduction to MEMS Design LecM 5 C. Nguyen 8/20/09 21

**Actual SUMMiT Cross-Section**

- No CMP until after the first three polySi layers
- 1  $\mu\text{m}$  mmpoly1 and 1.5  $\mu\text{m}$  mmpoly2 can be combined to form a 2.5  $\mu\text{m}$  polysilicon film
- Refer to the SUMMiT V manual (one of your handouts) for more detailed information on masks and layout instructions

EE C245: Introduction to MEMS Design LecM 5 C. Nguyen 8/20/09 22